


Closed Gas Stoves Diamond

1. First use (Connect the remote control)

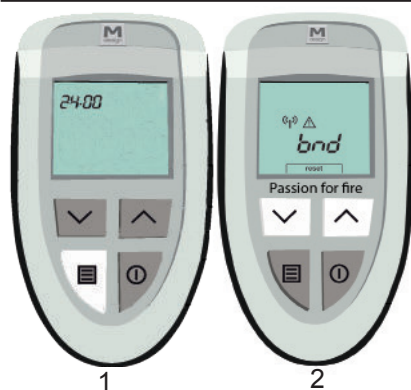

Keep pressing the button until 24:00 appears in the top left corner (1).

Press several times on until you see "bnd" on the screen (2)

Press shortly on and

You see the temperature on the screen. Your remote control is now connected.

2. Ignite the fire



Press simultaneously on and

You hear the ticking of the start pilot. The ticking lasts for about 25 sec.

At initial setup, it's possible that the pilot flame doesn't ignite immediately because the pipes are not yet fully deflated. You can try this up to 5 times before the unit will be placed in safety. If this fails, please contact your installer.

3. Manual control (1 burner)



From the moment you have a pilot light, you can start with the flame height control.

The screen will automatically show manual control (flame height control)

Press on until you see number 15.

This is the maximum flame height.

You choose a flame height from 1 to 15 by pressing or

4. Manual control (2 burners) **ECO SWITCH**



If your device is equipped with two or three burners, you start the first burner as in the manual control of one burner (see left). To ignite the side burners or second burner press and simultaneously.

To turn off the side burner or second burner press 1 time on

To turn off the main burner press the same button again. To switch off the entire stove (pilot light) press the button once more.

5. Thermostatic control °C



In case you want to go to a thermostatic control, you follow the next steps:

Press 2x the button until you see the screen with the symbols shown in figure 2. Press or until the symbol: and are blinking (fig. 2).

Confirm your choice by pressing (fig. 3).


Choose a temperature with the "up" and "down" arrows (fig. 4). Don't place the remote control near the fire. The temperature sensor is in the remote control. To get back to manual control do the same until and are blinking. Confirm with

6. ECO WAVE

ECO WAVE: each model is standard delivered with ECO-WAVE.

ECO-WAVE is an automatic cycle of fluctuating flames.

At each start-up of the fire, the system starts in ECO-WAVE mode!

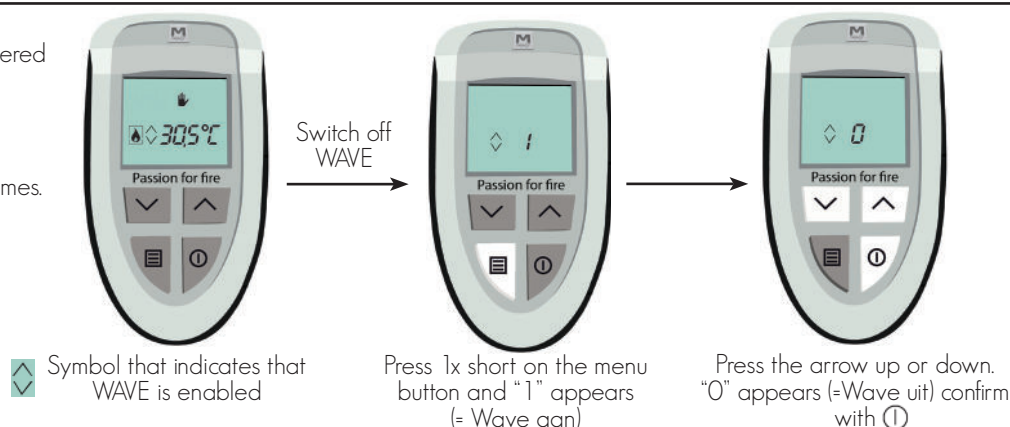

Shut down fire

Press 1 x to turn off the stove. With 2 or 3 burners, press a second time on

The pilot light continues burning and must continue to burn the entire heating season (see manual)